



# Operation Manual

## Referee Paging System 2018 Kazanci Sportwear& Referee Store

### 1. Overview

The REFEREE PAGING SYSTEM 2018 is a radio link with data transmission for electronic signaling from the assistant referee to the referee

### 2. The Assistant flag sends part



The radio transmitters are integrated in the handles of the assistant flags and send a data telegram to the receiver on the referee's arm when the button is pressed. As a control, a pulsating, even vibration can be felt on the handle. The flagpole is screwed into the handle and can be easily replaced. The battery cover (with bayonet lock) can also be removed or attached by turning it slightly

### 3. Control/ Commissioning & operation of the transmitter

- Before each game, it is advisable to ensure that the following parts are firmly seated: To send a signal, one of the send buttons on the handle is pressed. These are mutually arranged and thus enable very easy operation.
- Rod in the handle
- Battery cover and rubber cover
- As a check, a pulsating, even vibration can be felt on the handle, but has no effect on the function if it is not noticeable.
- Flag 1 and 2: ringtone and vibration 4x - 6x vibration. Duration is always different.



### 4. Insert and Change the battery


- Loosen and remove the battery cover by turning it
- Carefully pull out the battery until the battery clip can be seen
- Remove the battery clip, remove the old battery and replace it with a new one
- Fasten the cover again by gently pressing and turning it clockwise on the handle (drip a little household oil on the rubber rim so that the battery cover can be turned easily!)
- Check the seat of the rubber cover
- Recommended battery type: 9V Varta

### 5. Insert/ Change the rod

- Entfernen: Stange im Gegenuhrzeigersinn aus dem Griff drehen



- Insert: Turn the rod clockwise and with slight pressure into the handle. Caution: Use a little oil and open Führung der

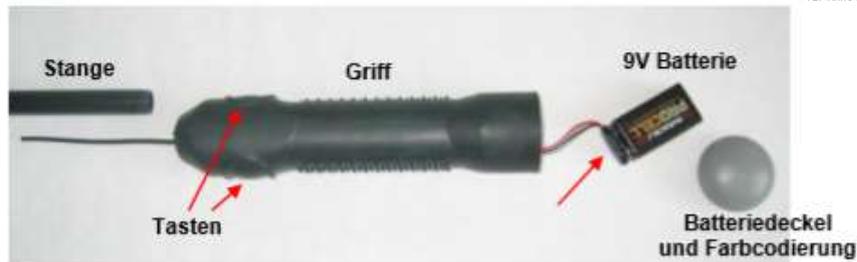

## 6. Der Pager



The receiver is housed in a small housing (pager) and is worn on the upper arm by means of the armband integrated in the housing base.

When signaled by one of the assistant flags, a "beep tone" sounds and vibration can be felt on the pager.

By removing the base plate, both the batteries and the armband can be replaced very easily.

## 7. Open the pager

To switch the pager on, the on / off button must be pressed until a high tone is heard. If the key is only pressed briefly, the pager does not switch on. The pager checks the battery status when switched on. The result of the check is displayed as follows: Battery is good: the LED lights up green, a tone sequence with increasing pitch sounds and the vibrator vibrates with short impulses. The LED may also light up red. This is completely normal. **If the pager is very quiet and vibrates little, the battery is empty. Please take the batteries out during summer and winter breaks.**



## Operation of the pager

If a signal is received from one of the assistant flags, the LED lights up orange, a constant tone sounds and the vibrator vibrates. Please take the battery over a longer break e.g. always take out winter or summer breaks. Please switch it off after every game or use, otherwise the battery will be empty !!!! The operating status is indicated by an LED. • LED flashes green: pager ready for operation • LED flashes red: batteries should be replaced as soon as possible

## Turn off the pager

Switching off the page In order to switch off the pager after use, the on / off button must be pressed until the LED lights up red and a high tone sounds. The button can then be released and the pager switches off. He shows this by a tone sequence with a decreasing pitch





### 8. Insert and Change the battery Pager

The pager is equipped with a 9V battery. By loosening the 4 Allen screws on the base plate with the screwdriver included in the set, it can be removed by lifting it slightly.

The battery can be inserted from above. It is essential to pay attention to the correct polarity of the battery, as the device can be damaged if it is inserted incorrectly. The polarity is given by the battery clip!

### 9. Fasten from Pager




After the arm has been looped through the pager, the pager can be positioned on the upper arm and then fixed by tightening the armband

### 10. Switch off sound/ set vibration only/ quieter

When you open the pager you will find a red box with numbers 1 and 2 and you can use it to adjust the volume and vibration.

1 and 2 ON is: Signal is loud and you have vibration

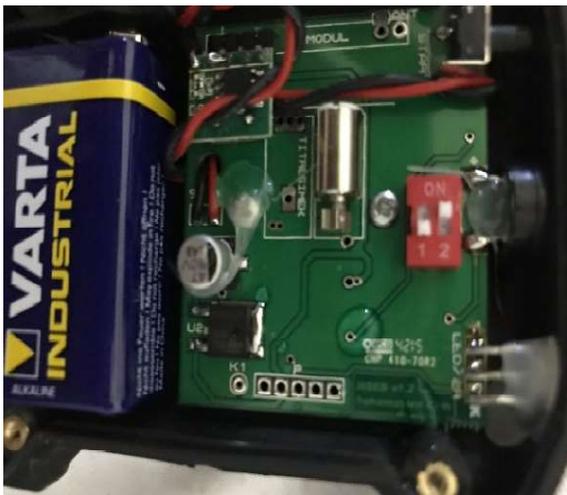

1 off and 2 on is you have quiet signal and vibration

1 on and 2 off is you don't have signal, only vibration





## 11. Guarantee Conditions

There is a 2-year guarantee on all material and manufacturing defects. Batteries are excluded from the guarantee; likewise, damage caused by improper handling, lack of care, accidents, normal wear and tear, and claims for consequential damage do not fall under the guarantee.

## 12. Repair

If a defect occurs on the device, this can either be sent to the seller or directly to the Kazanci Sportwear & Referee Store for repair. A short description of the error, the address of the sender and an email address should be included. When sending in from outside Austria, make sure that the shipping is marked as "REPAIR". Please note that the Kazanci Sportwear & Referee Store does not cover transport or customs costs. Das zu reparierende System senden sie bitte an folgende Anschrift:

**Kazanci Sportwear& Referee Store**  
**Neudörfnerstraße 17**  
**2492 Zillingdorf**  
**Austria**

**Kemal Kazanci**  
**Geschäftsinhaber**